



## 2 OUTLETHOSE FAUCET TIMER

### ⚠ Important, please read the following!



Do not allow the timer to freeze. Freezing temperatures can permanently damage your timer.




Do not use tools on the timer. Hand tighten only. Use of tools may damage the timer.



Keep the filter washer clean and in place when using the timer. Replace the filter if damaged. Debris entering the timer may prevent it from closing.



For cold water outdoor irrigation use only.

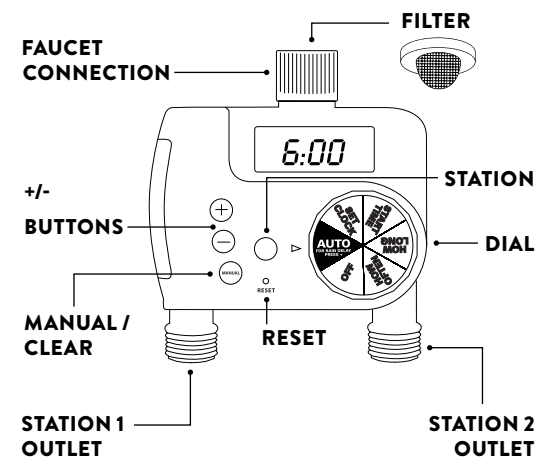


### TIMER FEATURES

**DIAL**—Rotate the dial to customize your watering schedule

**+/- BUTTONS**—Use these buttons to adjust time and system setup

**MANUAL**—Press to water manually or to clear programming

**RESET**—Press to clear all programming

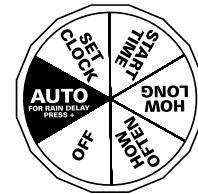

**AUTO**—Timer waters according to your customized schedule

**SET CLOCK**—Set the time of day

**START TIME**—Select what time you would like to start watering

**HOW LONG**—Determine how long to water

**HOW OFTEN**—Choose how often you will water

**OFF**—Turn off all watering


### INSTALLING THE BATTERIES

1. Remove the tray on the back of the timer by sliding or pulling it out.
2. Insert two AA (1.5V) alkaline batteries (not included) and replace the tray.

**NOTE:** Firmly replace the battery tray to ensure water resistance and increase battery life. You will know the battery tray is fully inserted if it locks in place and does not pull out easily. Used up or dead batteries must be removed from the timer and disposed of properly. Batteries should be removed from the timer at the end of the watering season and replaced with new ones at the beginning of the next watering season. Replace batteries when low battery icon appears on display. Do not dispose of batteries in fire. Batteries may explode or leak.


### PROGRAMMING THE TIMER

#### SET CLOCK

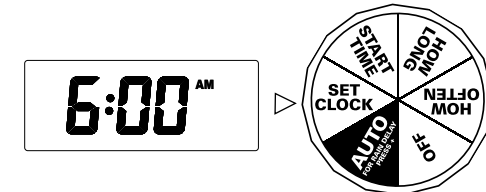


1. Turn dial to SET CLOCK.
2. Using the +/- buttons, set the time of day, including AM and PM. Timer advances faster if button is held down.
3. Turn dial to save changes.

#### START TIME

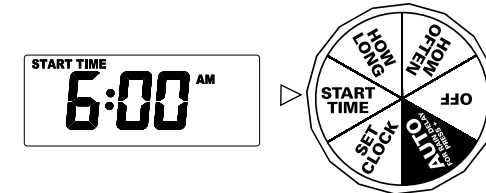


1. Turn dial to START TIME.
2. Using the +/- buttons, set your start time, including AM and PM. Timer advances faster if button is held down.
3. Turn dial to save changes.

#### HOW LONG

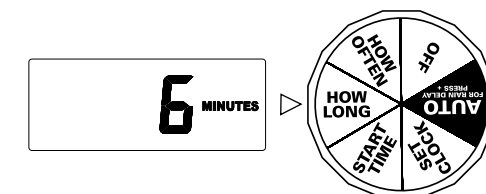

1. Turn dial to HOW LONG.
2. Using the +/- buttons, select watering duration from 1 to 240 minutes. Timer advances faster if button is held down.
3. Press CLEAR button to reset run time.
4. Turn dial to save changes.

#### HOW OFTEN

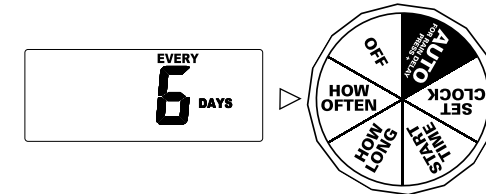

1. Turn dial to HOW OFTEN.
2. Using the +/- buttons, set your watering frequency. You may choose to water every 6 hours, 12 hours, or from 1 to 7 days.

**NOTE:** 1 is every day, 2 is every other day, etc.

3. Turn dial to save changes.

**NOTE:** For watering programs set up to run more frequently than once every 24 hours, your timer will use the watering interval to determine its first start time, rather than the start time you have entered for that program.

### CONGRATULATIONS!

Your timer is now programmed. Turn your dial to AUTO to allow your timer to water according to programmed time, station, duration, and frequency.

### ADDITIONAL FEATURES

#### RAIN DELAY



Rain delay allows you to postpone watering for a set period of time. To access the rain delay, follow the steps below.

1. With the dial on AUTO, press the + button to select a delay of 24 hrs, 48 hrs, or 72 hrs.
2. Screen will flash between clock and hours remaining before programmed cycle resumes.

**NOTE:** To remove rain delay, turn dial to OFF and then back to AUTO.

#### MANUAL/HAND WATERING



This feature allows you to water without interrupting your set schedule. To access this feature, follow the steps below.

1. With the dial on AUTO, press the MANUAL button.
2. Use the + and - buttons to select watering time, from 1 to 240 minutes. (There will be a slight delay between the time the + button is pressed and when watering begins.)

**NOTE:** To stop manual watering, turn the dial to OFF and then back to AUTO.

#### OFF MODE

Turning the dial to the OFF position at any time during the day will reset the timer's internal timing and will clear a RAIN DELAY or MANUAL watering. This will also cancel all scheduled watering times for the day until the next programmed START TIME. This means if you turn the dial back to AUTO the timer will not water until the next day; beginning at your desired programmed START TIME.

**EXAMPLE:** You have a 6:00 AM START TIME with HOW OFTEN 6 hour intervals. If you turn the dial to OFF at 10:00 AM today the timer will not water until tomorrow at 6:00 AM. The 12:00 PM, 6:00 PM, and 12:00 AM watering times have been cancelled for the day.

### TROUBLESHOOTING

#### Water does not come on at desired time.

Check if:

- Clock is set to correct time, including AM and PM.
- Dial is set to "Auto"
- Start time is set to desired time, including AM and PM.
- Rain Delay is on. Clear if necessary.

#### Timer does not water or has low flow.

Check if:

- Timer is set to AUTO.
- Hose faucet is on.
- Batteries are low.
- Clock is set to correct time, including AM and PM.
- Rain Delay is on. Clear if necessary.
- Filter washer screen is clean.
- Water pressure is above 25 psi.

#### Water won't turn off.

Check if:

- HOW LONG is set to desired time.
- HOW OFTEN is set to desired interval hour or day.

#### Timer is leaking.

Check if:

- Filter washer is in place.
- Filter washer is clean and undamaged.
- Faucet connection is hand tight.

#### Working water pressure:

- Minimum: 25 psi
- Maximum: 100 psi

#### Working temperature:

- Maximum: Do not exceed 120°F (48°C)
- Minimum: Keep from freezing

### Need Help?

If you encounter a problem, please use the following resources before returning your Orbit product to the store.



call us  
1-800-488-6156



text us  
801-797-2319



or visit us at:

[community.orbitonline.com](https://community.orbitonline.com)