

Removing Petrol Carburetor

1

Firstly remove the air filter cover screw
Remove the Aircleaner cover




2

Remove the Sponge Air cleaner and Gasket



3

Loosen and remove the air cleaner screws

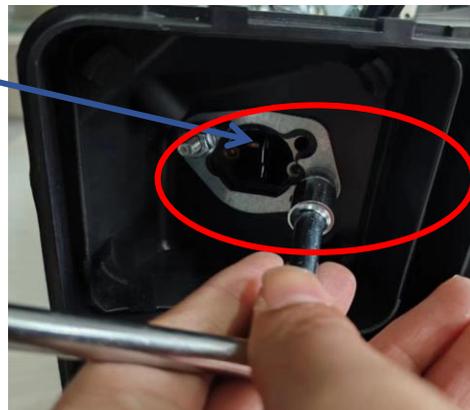

4

Remove air cleaner housing from carburetor



5
Remove the throttle assembly,
Remove the fuel pipe from carburetor
Install the new replacement gas carburetor



Installing Gas Carburator

6

Connect the return Spring, throttle and Fuel Pipe to the Gas Carburetor



7

Re install air cleaner back housing




8

Fasten the aircleaner screws




9

Instal the gasket inside the airfilter housing

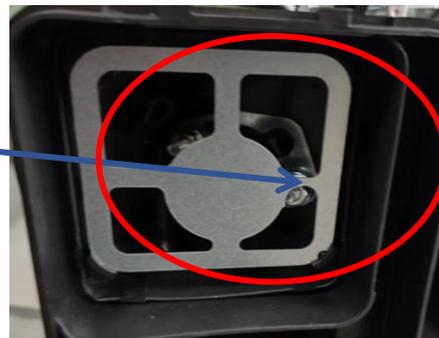

10

Re fit air cleaner sponge

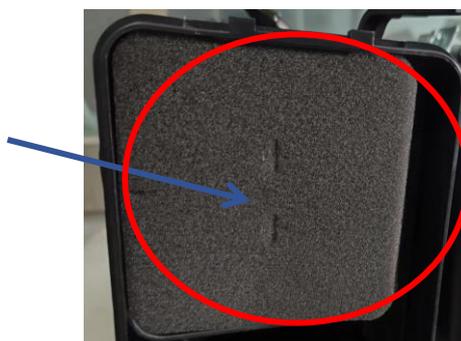

11

Put the airfilter cover back on and tighten the air filter cover screw

